

REMINGTON®

EST. NEW YORK 1937




Stylist Hair Clipper HC367

 remington-europe.com


Register online for an **EXTRA** year guarantee

Visit uk.remington-europe.com/product-registration You must register within 28 days of purchase.

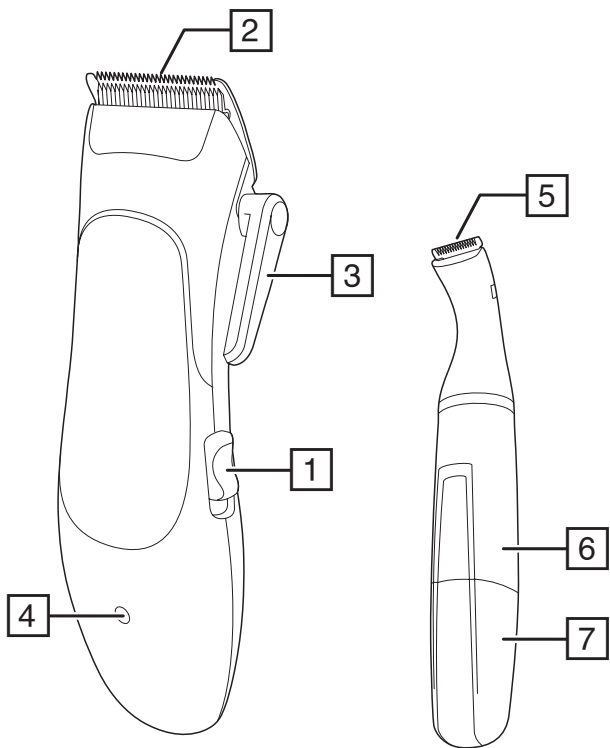

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

IMPORTANT SAFEGUARDS

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- Always check the appliance before you use it. Do not use the appliance if it is damaged, as this may cause injury.
- The adaptor contains a transformer. Do not cut off the adaptor to replace it with another plug, as this causes a hazardous situation.
-  The blades are washable under a running tap.
- The body of this appliance is not washable or water resistant. Do not put the appliance in liquid.
- **WARNING:** Detach the appliance from the charging adapter before cleaning it in water.
- Do not use the product with a damaged cord.
- **WARNING:** For recharging the battery, only use the charger supplied with the appliance - type reference PA-3215U.
- Always replace a damaged adaptor with one of the original type.
- The battery in this device is not replaceable.
- Do not use the appliance if it is damaged or malfunctions.
- Do not use attachments other than those we supply.
- This appliance should never be left unattended when plugged into a power outlet, except when charging.
- Keep the power plug and cord away from heated surfaces.
- Do not plug or unplug the appliance with wet hands.

- Do not twist or kink the cable, or wrap it round the appliance.
- This appliance is not intended for commercial or salon use.

BATTERY SAFETY

- Remove batteries if the unit is not in use for long periods.
- It is not recommended to use a rechargeable battery as this can result in poor performance
- Do not try to charge non-rechargeable batteries.
- Different types of batteries or new and used batteries are not to be mixed.
- Do not dispose of used batteries in a fire.
- Do not short circuit the battery contacts.
- Used batteries must be removed from the appliance, recycled or disposed of in an environmentally friendly way (see RECYCLING).

PARTS

- | | |
|------------------------|------------------------|
| 1. On/off switch | <i>Not shown</i> |
| 2. Blade set | • Adaptor |
| 3. Taper lever | • Scissors |
| 4. Charging indicator | • 8 x attachment combs |
| 5. Detail trimmer | • Comb |
| 6. On/off switch | • Neck brush |
| 7. Battery compartment | • Cleaning brush |
| | • 6 x clips |
| | • Pouch |

GETTING STARTED

CHARGING YOUR APPLIANCE

- Before using your hairclipper for the first time, charge for 14-16 hours.
- Ensure the product is switched off.
- Connect the charging adaptor to the product and then to the mains.
- The charging indicator will illuminate.
- Your clipper cannot be overcharged. However, if the product is not going to be used for an extended period of time (2-3 months), unplug it from the mains and store.
- Fully recharge your hairclipper when you would like to use it again.
- To preserve the life of your batteries, let them run out every 6 months then recharge for 14-16 hours.

CORDED USE

Connect the charging adaptor to the product then to the mains.
Extended mains only use will result in the reduction of the battery life.

TRIMMER

INSERTING BATTERIES

- Your trimmer requires 1 AA alkaline battery.
 - Make sure the product is turned off.
1. Rotate the battery compartment cap approximately 1/4 turn anti-clockwise then pull off.
 2. Insert 1 'AA' alkaline battery, so that the (+) and the (-) marks on the battery face the same mark in the battery compartment.
 3. Place the cap back on the unit using the alignment marks and rotate clockwise until the cap snaps into place.

Note: your hygienic clipper will not work if the batteries are inserted incorrectly.

Note: remove batteries if the unit is not in use for long periods.

TURNING ON THE TRIMMER

- The On/Off switch is integrated into the battery cap.
- Rotate the battery cap clockwise to turn on.
- To turn off, simply rotate the battery cap, anti-clockwise back to the off position.

INSTRUCTIONS FOR USE

BEFORE STARTING THE CUT

- Inspect the clipper making sure that it is free from hair and dirt.
- Seat the person so that their head is approximately at your eye level.
- Before cutting, always comb the hair so it is tangle free and dry.

TO ATTACH A COMB

1. Hold the comb with its teeth upward.
2. Slide it onto and along the clipper blade until the front of the comb firmly sits against the clipper blade.
3. Gently push the back of the comb down so it snaps into place.

TO REMOVE THE COMB

- Holding the clipper with the blades facing away from you firmly push the comb on the back tab upward and away from the blades.
- Each comb attachment is marked accordingly on its outside middle surface.
- (3mm, 7mm, 9mm, 12mm, 18mm, 25mm, left and right ear guide).
- Replacement combs available. Model: SP254

INSTRUCTIONS FOR CUTTING HAIR

- For even cutting, allow the comb attachment/blade to cut its way through the hair. Do not force it through quickly. If you are cutting for the first time, start with the maximum comb attachment.

STEP 1 – NAPE OF THE NECK

1. Use 3mm or 7mm guide comb.
2. Hold the clipper with the blade teeth pointing upwards. Begin starting at the centre of the head at the base of the neck.
3. Slowly lift the clipper, working upwards and outwards through the hair, trimming just a little at a time.

STEP 2 – BACK OF THE HEAD

- With the 12mm or 18mm guide comb attached, cut the hair at the back of the head.

STEP 3 – SIDE OF THE HEAD

- With the 3mm or 7mm guide comb attached, trim sideburns. Then change to the longer 9mm guide comb and continue to cut the top of the head.

STEP 4 – TOP OF THE HEAD

- Use the longer length comb attachment and set it to 18mm or 25mm then cut hair on top of the head against the direction in which the hair normally grows.
- For longer hair on top, use without a guide comb. Lift the hair on top of the head with a small hand comb. Cut over the hand comb with the hair lifted or hold the hair between the fingers to lift it and cut it to the desired length.
- Always work from the back of the head.

STEP 5 – THE FINISHING TOUCHES

- Use the clipper without an attachment comb for close trimming around the base and sides of the neck.
- To produce a clean straight line at the sideburns, reverse the hair clipper. Place the reversed clipper at right angles to the head, tips of the blades lightly touching the skin and then work downwards.

SHORT TAPERED STYLES – “FLAT TOPS” & SHORT CUTS

- Starting with the longest guide comb attached (25mm), cut from the back of the neck to the crown. Hold the guide comb flat against the head and slowly move the clipper through the hair.
- Use the same procedure from the lower side to the upper side of the head. Then cut the hair against the direction in which it grows and level with the sides.
- To give a “flat top” look, the hair on top of the head must be cut over the top of a flat comb.
- Use a closer guide comb to taper the hair down to the neckline as desired.

TAPER LEVER

This product has a taper lever located at the left side of the clipper near the blades. Adjust the lever to change the closeness of the cut gradually and also to improve the effectiveness of the comb attachments. The taper lever also extends the life of the blades because a different cutting edge is used in each setting.

TRIMMER

TO DEFINE THE BEARD/MOUSTACHE LINE

- Hold the trimmer with the trimmer blade facing you.
- Start with the edge of the beard/moustache line and gently lower the trimmer blade onto your skin. Use motions towards edge of beard/moustache line to trim the desired locations in facial area and away from beard in the neck area.

TRIMMING EDGE OF SIDEBURNS

- Hold the trimmer with the trimmer blade facing you.
- Start with the edge of the sideburn and with the trimmer blades resting lightly against your skin, use motions towards edge of the sideburn line to trim to the desired locations in the facial area.

CARE FOR YOUR HAIRCLIPPER

- Your clipper is fitted with high quality blades.
- To ensure long lasting performance of your clipper, clean the blades and unit regularly.
- Always keep the attachment guide comb on the trimmer blade.

Note: Ensure the clipper is turned off when cleaning.

EVERY SIX MONTHS

- At regular intervals the blade set should be removed and cleaned.
- Remove the 2 screws retaining the fixed blade with a screwdriver. Do not remove blade set.
- Brush out hairs from between the blades with soft cleaning brush. Do not remove the lubricating grease from the blades. It is not necessary to remove the small moving blade from the unit.
- If the moving blade has been removed this can be re-fitted by slotting the coated blade holder over the pin in the centre of the interior product head. The groove on the coated blade, just below the teeth, rests on a metal plate at the opposite side to the screw holes. The fixed blade is fitted with the raised profile pointing outwards and fixed with the 2 screws.
- Before fully tightening the 2 screws, adjust the taper lever to the lower position and align the blades so that their cutting edges are parallel to one another. Tighten the 2 screws.
- If the blades are not correctly aligned, cutting efficiency will be impaired.
- Place a few drops of cutter or sewing machine oil onto the blades. Wipe off excess oil.

CAUTION:

- Do not use liquid cleaners on the blades or harsh or corrosive chemicals on the blade casing. Always use a soft brush to remove the accumulated hairs.

- Unplug the charge adaptor from the power outlet when fitting or removing attachments, or while cleaning the product.
- Always store this appliance and cord in a moisture-free area.
- Do not wrap the cord of the charging adaptor around the appliance.

TROUBLESHOOTING

If blades do not seem to cut hair easily, the taper lever can be used to remove any hair caught between the comb and blade. Switch the clipper on and move the taper lever up and down a few times but do not force the lever in either direction. This should remove hairs and restore the cutting efficiency.

If not, contact your nearest Remington® Service Centre.

CARE FOR YOUR TRIMMER

- Care for your product to ensure a long lasting performance. We recommend you clean your trimmer after each use. The easiest and most hygienic way to clean the trimmer is by rinsing the product head after use with warm water.
- Always keep the clipper in the off position when not in use.

AFTER EACH USE

- Rinse the accumulated hair from the cutters and shake off excess water.
- Wipe the main unit with a damp cloth and dry immediately.

CLEANING CAUTIONS

- Cleaning should only be done with a soft brush.
- Do not use harsh or corrosive cleaners on the units or their cutters.
- Do not apply pressure or hard objects to the cutters.
- Do not submerge in water as damage will occur.

REMOVING THE RECHARGEABLE BATTERY

This appliance contains batteries that are non-replaceable. When the battery is at the end of its life, the appliance and battery must be properly disposed of at an official recycling point.

We strongly recommend that a professional removes the rechargeable battery. Parts of the shaver case, and tools have sharp edges and may cause injury if not handled correctly.

- The battery must be removed from the appliance before it is scrapped.
 - Disconnect the charging adapter before removing the battery.
 - Be aware of the risk of terminals of the battery-operated appliance or battery being short circuited by metal objects.
1. Ensure that the battery is fully discharged. To do this, operate the device until it stops.

2. Use a small flat screwdriver to pry the cover off the bottom housing.
 3. Remove the screw from the bottom housing.
 4. Pry open the top housing to expose the batteries.
 5. Cut the two wires on the end of the battery then take it out.
- Used batteries must be removed from the appliance and disposed of at an appropriate official recycling/collection point.
 - Do not attempt to operate the device once you have opened it.

RECYCLING



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/collection point.

ADAPTER SPECIFICATIONS

Manufacturer address and registration number	Spectrum Brands (UK) Limited, Regent Mill, Fir Street, Failsworth, Manchester M35 0HS Company number: 02394603
Adapter model number	PA-3215U
Input voltage	100 - 240 V~
Input AC Frequency	50/60Hz
Output voltage	3.2 V ---
Output current	1.5 A
Output power	4.8 W
Average active efficiency	≥73.31%
Efficiency at 10%	-
No load power consumption	≤0.1W

SERVICE AND GUARANTEE



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under any economic sanctions, export control laws, embargos, or other restrictive trade measures enforced by the United States or other applicable jurisdictions. This includes, without limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the Crimea region.

Register at: <https://uk.remington-europe.com/product-registration>

Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts* are excluded and are only covered by a 1 year warranty.

*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.

SERVICE CENTRE

UNITED KINGDOM

 0800 212 438 (free call mainland UK)


Spectrum Brands (UK) Ltd
Fir Street, Failsworth, Manchester
M35 0HS, UK

www.remington.co.uk

Product support:

productsupport@remington.co.uk

IRELAND

 142 951 40

Remington Consumer Products,
Unit B12, Ballymount Corporate Park,
Ballymount, Dublin 12

<https://ie.remington-europe.com>

Product support:

productsupport@remington.co.uk

REMINGTON®
EST. NEW YORK 1937



T22-7003064