## **MPx6 THE KEY TO SECURITY**













**ANTI-PLUG** 



**ANTI-PICK** 



**ANTI-BUMP** 



**BRITISH STANDARD 6 PIN CYLINDERS** 

By Carlisle Brass

## Anti - Attack Features



ANTI-DRILL

Hardened steel Anti-Drill pins, plugs and disc.



ANTI-SNAP

Snap off front section (sacrificial cut).
Anti-Snap on both sides of unequal sized cylinders.



ANTI-PLUG PULL Anti-Plug Pull feature.



ANTI-PICK

Special Anti-Pick pins.



**ANTI-BUMP** 

Unique Anti-Bump feature.





TS 007:2012 KM 585549

## TS 007:2012

Cylinders and security hardware are now classified in TS 007 according to star rating. Cylinders are able to achieve 1 or 3 stars. Security hardware can attain 2 stars. To attain 3 stars combine an MPx6 cylinder with 2 star rated security hardware and acheive the level of security required to resist known attack methods.






FD30/60

BS EN 1303:2005

# Innovative Technology

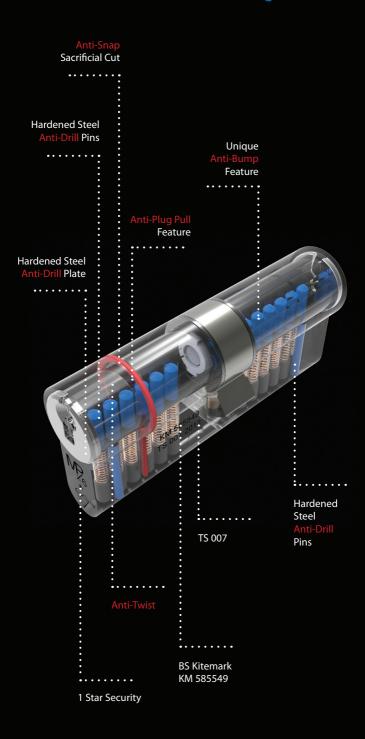

# Master Keying Capability

We are licensed to supply Kitemarked Master Keyed cylinders.

The product is supplied with 3 specially manufactured, hardwearing silver nickel keys as standard.

Additional keys can be supplied with cylinders on request from our cylinder shop. For further info call 01254 274140.



### **Suitable Environments For Use:**







## Security Matrix

## **MPx6 British Standard 6 Pin Cylinders**

BS EN 1303:2005	<b>✓</b>
BS EN 1634 PART1:2000	<b>✓</b>
FD30/60	1
TS 007:2012	<b>✓</b>
Kitemark™	<b>✓</b>
Anti - Drill	/
Anti - Snap	1
Anti - Bump	<b>✓</b>
Anti - Pick	<b>✓</b>
Anti - Plug Pull	1
Anti - Twist	<b>✓</b>














### Step 1

Remove your old euro cylinder from your door by simply un-screwing the fixing screw in the lock faceplate when the door is in the open position. Insert and turn the key 30° and remove cylinder from the door. For thumbturn version turn thumbturn and remove cylinder.

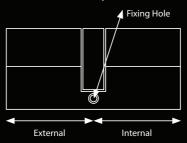

### Step 2

Measure the euro cylinder against the ruler on the right. Measure from the outside of the cylinder to the centre of the fixing hole and from the fixing hole to the inside of the cylinder. (Replace the cylinder).


you have measured previously.

### Step 4

Step 1. Place the new euro cylinder through the door ensuring the special snap feature is facing the outside of the door.

provided, taking care not to over-tighten.

with suitable 2 Star security hardware.

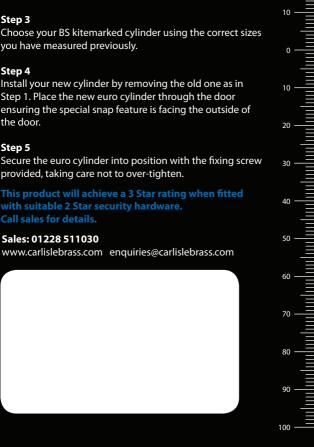

	60	=
	50	
	40	
	30	
	20	
•		
	10	
	-10	
S		
	0	
	10	
	10	
	20	
.,		
V	30	=
	40	_
	-10	
	50	
	60	
	-00	
	70	
	00	
	80	
	90	
	100	

100

90

80

70